

## Corvette nycklar – resistance

koderna är för C5/

Se svensk instruktion under C4

Part# 35055-xx

To determine **the** xx at **the** end of **the** part number you need to read **the resistance** of **the key**:

If you have a DVM, set it **on** ohms mode and **measure the resistance** of **the** pellet **on your key**. Do a search **on the** web for "VATS" or "PASS-Key" for an explanation. **The** BCM is programmed for a specific **resistance** value. **The** BCM measures **the** voltage drop across **the key** pellet. If it is within +/-10%, then **the** car will start.

**The** 15 resistor codes are:

Key# Value (Ohms)

1 -	392
2 -	523
3 -	681
4 -	887
5 -	1130
6 -	1470
7 -	1870
8 -	2370
9 -	3010
10 -	3740
11 -	4750
12 -	6040
13 -	7500
14 -	9530
15 -	11800

